 


knog.

# Blinder MOB

## QUICKSTART GUIDE

### RECHARGE BEFORE FIRST USE



 
USB Plug



USB Plug

\* Standard model shown

### INTERFACE



- A. Low Battery Indicator
- B. Power / Mode switch
- C. Recharge Indicator

Long press B to turn light on and off.  
Short press B to cycle between modes.

### V INTERFACE



- A. Recharge Indicator
- B. Power / Mode switch
- C. Low Battery Indicator

Long press B to turn light on and off.  
Short press B to cycle between modes.

### FITMENT

#### FRONT LIGHT

2 STRAPS & 1 CLASP INCLUDED

- 1. SML: Ø 22-27MM
- 2. MED: Ø 27-32MM



#### REAR LIGHT & V

3 STRAPS & 1 CLASP INCLUDED

- 1. SML: Ø 22-27MM
- 2. MED: Ø 27-32MM
- 3. LRG: Ø 32+MM\*



\* Suitable for most aero posts

### INTERCHANGEABLE STRAP



Stretch strap to fit clasp



Place strap end over hook



Pull strap toward the light body

### MOUNTING



- 1. Pull silicone strap around bar
- 2. Engage latch into hook

### THE MOB

The Blinder MOB range is available in Front, Rear and Vertical lights. (Eyeballer excluded.)



Eye Baller



Four Eyes



The Face



Kid Grid



Mr Chips